




## ***TR30 Massage Chair*** **OPERATION INSTRUCTIONS**

**SAVE THESE INSTRUCTIONS**

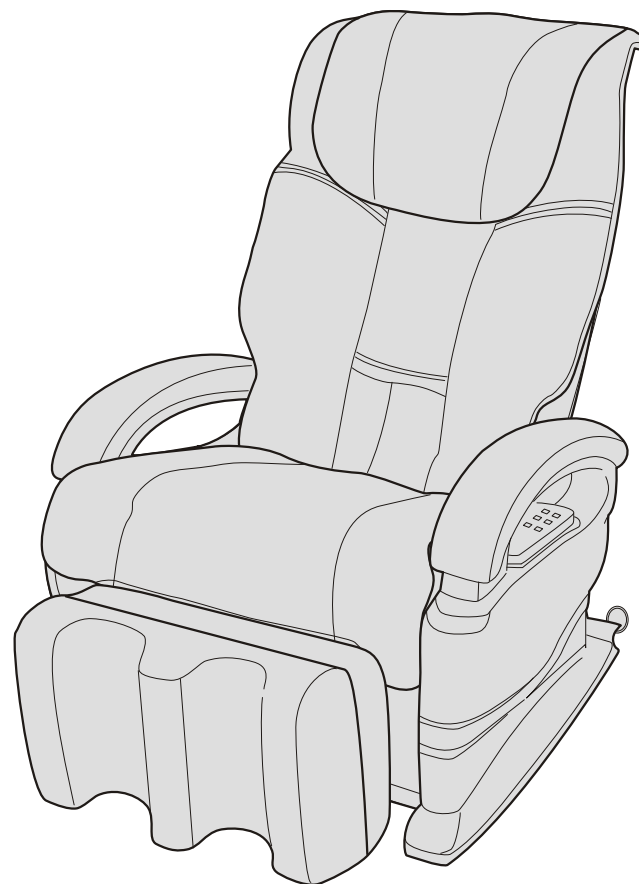

Thanks for purchasing this product. Please read this manual instruction carefully in order to know how to use this product correctly before operation. Please pay more attention to some important safety warning and keep this manual book properly for future use. Note: Our Company reserves the right to revise the design and description of this product without any further notice. Please refer to the actual color of this product.

## CONTENTS

---

Safety and maintenance	02
Name and function of components	04
Function	05
Method of usage	06
Product specification	08

## Safety and maintenance

---

### 1. Important safety warning.



- Don't allow children to touch moveable part of this product.
  - Please use well-grounding power supply suited to this product.
  - Please pull out the plug after use or before cleaning to avoid injury or damage to the product.
  - Please operate this product according to this manual instruction.
  - Don't use accessories which are not recommended.
  - Don't use this product outdoors.
  - Please read this manual instruction carefully before operation.
  - Any other usage that is not listed in this manual instruction is forbidden.
  - 15 minutes of usage each time is recommended.
  - Please don't use it if the leather is broken or damaged.
  - Please don't use it if the cover or leather is damaged.
  - Please don't use it if the radiator hole is covered or blocked.
  - Please don't drop anything into this product.
  - Please don't fall asleep while using this product.
  - Please don't use it if drunk or feel unwell.
  - Please don't use it within one hour after having meal.
  - Please don't make the massage function too strong for avoiding injury.
2. Environment for usage.
- Please don't use it under high temperature and moist environment such as bathroom.
  - Please don't use it immediately while the environmental temperature changes sharply.
  - Please don't use it under heavy-dusty or caustic environment.
  - Please don't use it where there is not enough space or not good ventilation.
3. People who are not suitable to use this product.
- People who are suffering from osteoporosis are not suitable to use this product.
  - People who are suffering from heart disease or carrying electronic medical equipment such as heart pacemaker are not suitable to use this product.
  - People who are suffering from fever are not suitable to use this product.
  - Pregnant women or women that are in menses period are not suitable to use this product.
  - People who got injured or skin disease are not suitable to use this product.

## Safety and maintenance

---

- Children under twelve or people who are not able to operate this product are not suitable to use this product.
- People who are told by doctor to have rest or people who feel unwell are not suitable to use this product.
- People whose bodies are wet are forbidden to use this product.

### 4. Safety.

- Check the voltage if it is suitable to the specification of this product.
- Don't use wet hand to pull the plug.
- Don't make water spatter to this product to avoid electric shock or cause damage to this product.
- Don't damage the wires or change the circuit of this product.
- Don't use wet cloth to clean the electric parts such as switch and plug.
- Be away from this product under power cut state to avoid injury if the power comeback suddenly.
- Stop using this product while it works abnormal, and please consult local agent immediately.
- Stop using this product if you feel unwell, and please consult health care doctor.


### 5. Maintenance.

- This product should be maintained by certain appointed agents, users are prohibited to disassemble or maintain by themselves.
- Please don't forget to cut the power after usage.
- Don't use this product if the socket looses.
- If this product will be left unused for long, please curl up the wires and reserve this product in dry and dustless environment.
- Don't reserve this product under high temperature or near fire and avoid longtime direct sunshine.
- Please clean this product by dry cloth. Don't use thinner, benzene or alcohol.
- The mechanical components of this product are specially designed and made, it is not necessary to be specially maintained.
- Don't use edged res to thrust this product.
- Don't roll or pull this product above uneven ground, it should be lifted before moving.
- Please use it intermittently; don't make this product work continuously for long.


### 6. Solution of ordinary malfunctions.

- It is nature movement voice if the motor sounds while in usage.
- If the controller can't work normally, please check the plug and socket if they are connected strongly and make sure the switch is turned on.
- If the rated working time is over, the product will automatically activate the power-off button; if this product works continuously for long, the temperature protector will make the product automatically power-off, it should be used again after half an hour's rest.

## Name and function of components

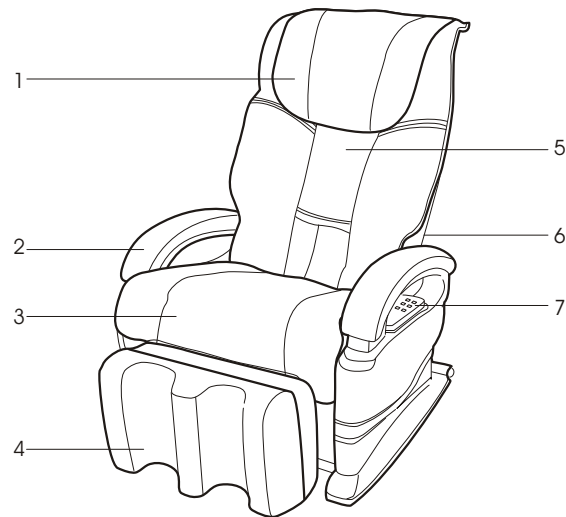

1. Head pad
2. Armrest
3. Seat cushion
4. Calf support
5. Back cushion
6. Back cover
7. Control box
8. Ventilator
9. Power button
10. Fuse block
11. Wire
12. Plug
13. Caster

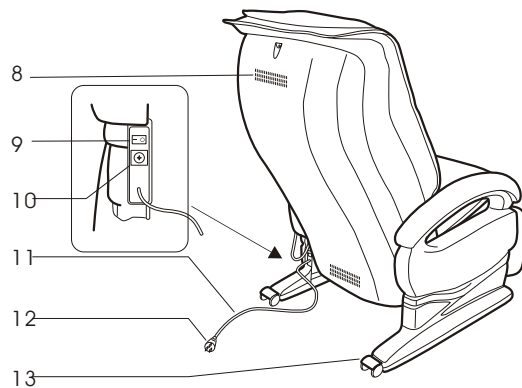

## Function

### Function

- Designed with a four-wheel driven muted massage mechanism which can move up and down in the backrest.
- Designed with four emulational massage functions of kneading, flapping, vibration and tapping.
- Designed with three levels of speed.
- Designed with three automatic massage choices for the neck and shoulder, the whole upper body and the back and waist area.
- Turn off the back stretch function, the massage hands can be moved up and down to massage any position of the vertebra.
- Designed with vibration function for the buttocks with three levels of speed.
- Designed with tapping massage function for the thigh area with seven automatically changed modes and three levels of speed.
- Designed with kneading massage function for the calf rest with three levels of speed from slow to fast.
- The calf rest can be power-lifted and reclined together with the backrest.
- Restoring the massage hands after turning off the machine.

## Method of usage

### MASSAGE OF THE UPPER BODY

#### 1. automatic massage of the upper body

NECK-SHOULDER: to start automatic massage of the upper body around your neck and shoulder.

BACK-WAIST: to start automatic massage of the upper body around your back and waist.

UPPER BODY: to start automatic overall upper body massage.

#### 2. manual massage of the upper body

KNEAD: to start kneading.

FLAP: to start flapping.

BACK STRETCHING: to move the massage device vertically to and fro stretching your upper body.

SPEED: for speed selection :slow, medium, fast

UPWARD: when the ‘back stretching’ button is switched off, press the ‘upward’ button to move the massage device upward which stops when you release the button.

DOWNWARD: when the ‘back stretching’ button is switched off, press the ‘downward’ button to move the massage device downward which stops when you release the button.

### MASSAGE OF THE LOWER BODY

#### 3. buttocks vibrating

BUTTOCKS: to start buttocks vibrating.

INTENSITY: for intensity selection: soft, medium, and strong.

#### 4. thigh knocking

THIGH: to start thigh knocking.

INTENSITY: for intensity selection: soft, medium, and strong.

#### 5. calf kneading

CALF: to start calf kneading.

SPEED: for speed selection: slow, medium, fast

### THE ASCENDING AND DESCENDING OF THE BACK AND CALF SUPPORT

#### 6. the ascending and descending of the calf support

ASCENDING: press this button to move the calf support upward slowly with the indicator on; release this button to stop the calf support, with the indicator out. When the calf support reaches its highest position, the ‘upward’ indicator shines.

DESCENDING: press this button to move the calf support downward slowly, with the indicator on; release this button to stop the calf support, with the

## Method of usage

indicator out. When the calf support reaches its lowest position, the ‘downward’ indicator shines.

#### 7. the ascending and descending of the back

ASCENDING: press this button to move the back upward slowly with the indicator on; release this button to stop the back, with the indicator out. When the back reaches its highest position, the ‘upward’ indicator shines.

DESCENDING: press this button to move the back downward slowly, with the indicator on; release this button to stop the back, with the indicator out. When the back reaches its lowest position, the ‘downward’ indicator shines.




## Method of usage

---

2. Open and pucker the backrest before operating.


Pull the backrest up until it touches the backrest pucker lock and sounds “KATA”, then the backrest is locked. The backrest can be pucker to its original state by treading the lockdown.

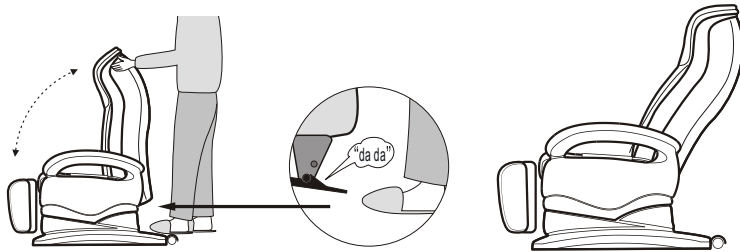

3. Method to remove and use the pillow and backrest cushion.

It can reduce the strength by using the pillow when massaging neck & shoulder, you can choose to use it (recommended) or not up to your demands. The backrest cushion and the backrest are connected by slide fastener, (1). The pillow and backrest cushion are connected by slide fastener, (2).

Warning: It is forbidden to use the product if the backrest cushion is lifted to avoid causing injury to you.

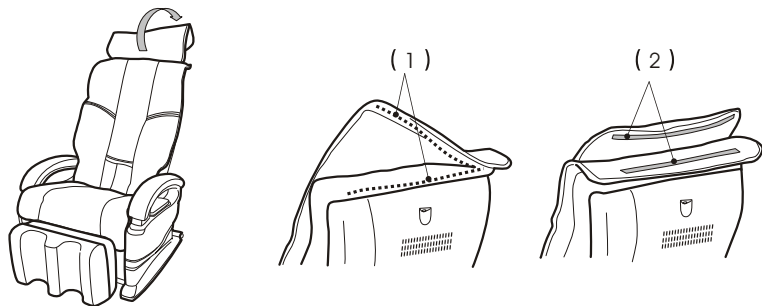

## Product specification

---

Name: Massage chair

Input Voltage: 110-120V~ 60Hz   
220-240V~ 50Hz/60Hz

Input power: 200W

Safety structure: Type I